



	CP750A4H#BP57 Series Photo Pack (10 x 15 cm, 60 sheets)	CP750B4H#BP343 Series Photo Pack (10 x 15 cm, 60 sheets)	CP750C4H#BP343 Series Photo Pack (10 x 15 cm, 60 sheets)	CP750D4H#BP343 Series Photo Pack (10 x 15 cm, 100 sheets)	CP750E4H#BP343 Series Photo Pack (10 x 15 cm, 100 sheets)	CP750F4H#BP343 Series and 348 Series Photo Pack (10 x 15 cm, 100 sheets)	CP750G4H#BP343 Series and 348 Series Photo Pack (10 x 15 cm, 100 sheets)
HP Deskjet 450c/450cb/450wbt	x		x				
HP Deskjet 460c/460cb/460wbt	x	x	x	x			
HP Deskjet 5145/5150/5151/5550/5552/5650/5652/5655	x		x				
HP Deskjet 5740/5745	x	x	x	x			
HP Deskjet 5850	x		x				
HP Deskjet 5940	x		x				
HP Deskjet 6520/6540/6540d	x	x	x	x			
HP Deskjet 6620/6840/9800/9800d	x	x	x	x			
HP Deskjet 9650/9670/9680/9680gp	x		x				
HP Digital Copier 410	x		x				
HP Officejet 4105/4110	x						
HP Officejet 4212/4215/4219/4252/4255	x		x				
HP Officejet 5505/5510/5515	x						
HP Officejet 6110	x		x				
HP Officejet 6205	x	x	x	x			
HP Officejet 6210/6215/7210/7310/7410	x	x	x	x			
HP PSC 1100/1200/1205/1210/1213/1215/1217/1219	x						
HP PSC 1310/1311/1312/1313/1315a/1317/1350/1340/1355	x		x				
HP PSC 1350	x						
HP PSC 1510/1510a/1600/1610	x	x	x	x			
HP PSC 2105/2108/2110/2115/2175/2179/2210	x		x				
HP PSC 2350/2355/2355p	x	x	x	x			
HP PSC 2410/2510	x		x	x			
HP Photosmart 100/130/145/230/245	x						
HP Photosmart 325/335/375/385/422/428	x	x	x				
HP Photosmart 475	x	x	x				
HP Photosmart 2575/2610/2710	x	x	x	x			
HP Photosmart 3210/3110/3310	x			x			
HP Photosmart 7150/7260/7345/7350/7450/7499/7550/7655	x		x				
HP Photosmart 7660/7755/7760/7762/7960/7960gp	x		x				
HP Photosmart 8050	x	x	x	x			
HP Photosmart 8150/8450/8450gp	x	x	x	x			
HP Photosmart 8250	x		x	x			
HP Photosmart 8750/8750gp	x	x	x	x			